

trent&steele

INSTRUCTION MANUAL



Kettle
Model TS173

IMPORTANT SAFETY REMINDERS

- This appliance should be for domestic use only, as described in this users' guide. Please ensure that this manual is fully understood before using the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- To ensure the continued safe and efficient operation of this appliance, we recommend that any servicing or repairs are only carried out by an authorised service agent.
- Ensure the unit is plugged into an electrical outlet with the correct voltage.
- If the appliance or the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person, in order to avoid any hazard.
- Always place the appliance on a flat, level surface.
- Allow to cool down before cleaning or storage. The mains cable must not come into contact with any hot parts of the appliance.
- Do not immerse the appliance in water or any other liquid. Do not overfill and go beyond the MAX marking (or below the minimum) as boiling water may spray out which could scald or burn.
- Never operate appliance with open lid.
- Do not use or place the appliance on a hot surface or near source of heat.
- Only use the kettle for heating water.
- The kettle can only be used with the stand provided. Only original parts should be used.

- Do not leave the appliance unsupervised in the course of its operation.
- If water gets into any electrical elements inside the kettle or its base, carefully dry the parts before plugging in the kettle to the mains.
- Do not operate the kettle when empty.
- Do not plug in the power cord with wet hands.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Appliance is for indoor use only.
- This appliance is intended for domestic use only. The manufacturer cannot accept any liability for possible damage caused by improper or incorrect use.

PARTS

1. Stainless steel housing
2. Automatic hinged lid
3. Lid release button
4. Handle
5. ON / OFF switch
6. Water level indicator
7. 360° rotating base
8. Replaceable filter



USING YOUR KETTLE

- Before first use, fill the kettle with water to the MAX level, boil it, and then empty and rinse with fresh water. Repeat a couple of times to remove production dust, etc.
- Wipe the outside of the kettle with a damp cloth.
- Press the Lid Release Button to open the lid and pour water into the kettle. (It is also possible to fill the kettle through the spout, without opening the lid.)
- Close the lid and place the kettle on the base.
- Switch the kettle on.
- The kettle will switch off automatically after water boils. However, it may be switched off at any time by moving the ON / OFF switch to the off position.

Note: Never open the lid in the course of the boiling process.

CLEANING AND MAINTENANCE

Note: The kettle should be regularly descaled in accordance with the instructions below.

Always unplug power base cord before cleaning and allow the jar to cool down first.

- Fill the jar with water mixed with vinegar or lemon juice (citric acid) or a special descaling agent available in shops selling household equipment.
- Let the mixture soak in the kettle for an hour and boil the water thereafter.
- Empty the kettle and rinse the inside thoroughly with cold water. Repeat this action up to three times, if necessary.
- In order to eliminate the smell of vinegar, boil and remove water several times.

- Wipe the outside of the jar with a damp cloth.

Caution! Do not use any wire brush or other abrasive objects. Do not use any acidic or abrasive detergents.

Warning: Never immerse the device or the base in water or other liquids. This may result in electric shock or fire.