

# trent&steele

## INSTRUCTION MANUAL



**Kettle**  
Model TS176

### IMPORTANT SAFETY REMINDERS

- This appliance should be for domestic use only, as described in this users' guide. Please ensure that this manual is fully understood before using the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- To ensure the continued safe and efficient operation of this appliance, we recommend that any servicing or repairs are only carried out by an authorised service agent.
- Ensure the unit is plugged into an electrical outlet with the correct voltage.
- If the appliance or the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person, in order to avoid any hazard.
- Always place the appliance on a flat, level surface.
- Allow to cool down before cleaning or storage. The mains cable must not come into contact with any hot parts of the appliance.
- Do not immerse the appliance in water or any other liquid. Do not overfill and go beyond the MAX marking as boiling water may spray out which could scald or burn.
- Never operate appliance with open lid.
- Do not use or place the appliance on a hot surface or near source of heat.
- Only use the kettle for heating water.
- The kettle can only be used with the stand provided.
- Appliance is for indoor use only.

2

- This appliance is intended for domestic use only. The manufacturer cannot accept any liability for possible damage caused by improper or incorrect use.

### USING YOUR KETTLE

- Before first use, rinse the inside and wipe the outside of the kettle with a damp cloth.
- Press the button to open the lid and pour water into the kettle. It is also possible to fill the kettle through the spout, without opening the lid.  
*Note:* Make sure water level does not exceed the MAX mark.
- Place the base unit on a firm and flat surface. Plug the mains plug into a wall socket. Excess cord can be wound into the bottom of the base unit.
- Fill at least 0.5 L to ensure that the temperature shown on the display is correct.  
*Recommended temperatures:*  
70° for delicate teas (green or oolong, etc)  
85° for instant coffee or instant soup  
100° for perfect black tea
- Close the lid and make sure that it snaps in correctly -- otherwise, the auto switch off function will not work reliably.
- Place the kettle on the base correctly -- there will be a beeping sound and the will turn blue and start flashing. The LCD display will indicate the current water temperature for 5 seconds. If there is no operation, the power will simply cut off.
- To initialize, press . The button will turn red.
- The screen will show the target temperature. Press or to select desired temperature (40° to 100°) and wait for 5 seconds to start heating. Once the water temperature reaches the target temperature, the kettle will make a beeping sound and will automatic turn off.  
*Note:* You can always press to cancel heating.

3

- To use the 'Keep Warm' function:

- 1) After pressing and;
- 2) Selecting your desired temperature by pressing or ;
- 3) Press (the 'Keep Warm' button).

- Once the water temperature reaches the target temperature, the kettle will make three beeping sounds and will stop heating and will proceed to the 'Keep Warm' function.

*Note:* You can always cancel the 'Keep Warm' function by just pressing .

### CLEANING AND MAINTENANCE

- Before cleaning, always unplug the appliance.
- Never rinse or immerse the kettle or base unit in water. Just wipe with a damp cloth, using no abrasive detergents. Occasionally rinse out the kettle with clean water.
- To clean the mesh filter, grab the strainer insert and lift out.
- Superficial spots of rust may appear on the base unit. Remove with a stainless steel cleaning agent.
- Decalcifying is recommended regularly, depending on water hardness.  
How to do it? Fill the kettle with water and decalcifier (according to decalcifier product instructions). Do not boil the solution as it may foam over. Afterwards, rinse kettle thoroughly with fresh water.

4

### TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The appliance switches off before boiling.	Too much lime scale on the heating element of the kettle.	Decalcify.
The appliance does not switch off.		Close lid until it locks. Insert the mesh filter correctly.
The appliance does not switch on.	After operating with little or no water, the appliance has not cooled down sufficiently.	Allow to cool down and try again.

5